

3B & 3BX Consumables & Repair Parts (115V)

MOTORS/MOTION CONTROL		
NEW PN	Old PN	Description
02-054-184	NOP-33280	Motor Mount Assembly (Includes board & motor)
20-054-234	NOP-33287	Motor Mount Cable
02-071-706	NOP-33286	Torsion Spring
15-050-651	NOP-33298	Bearing & Rail Combo 85mm (Left/right)
15-050-700	NOP-33168	Bearing & Rail Combo 55mm (Up/down)
05-058-035	NOP-33293	Holder (Post & chuck)
90-051-290	NOP-33284	Board Interface (Board only with two optical switches)

POWER BOARDS		
NEW PN	Old PN	Description
20-054-258	NOP-55510	Power Cord
20-053-131	NOP-77428	Power Supply (24V)
02-063-973	NOP-33653	PCB (Mother Board) Assembly (3BX)
02-067-345	NOP-33665	Display Assembly (Polarized)
20-054-237	NOP-33311	Display Cable
05-058-038	NOP-33312	Display Power Inverter
20-054-238	NOP-33319	Fan Assembly
20-057-239	NOP-33356	Keypad Assembly (3BX only)
20-054-239	NOP-33323	Keypad Cable (Both keypads)
20-054-240	NOP-33324	Foot Switch (Pneumatic)

LIGHTING		
NEW PN	Old PN	Description
20-053-130	NOP-33260	Lamp
02-054-191	NOP-33211	Cable Assembly Light Dimmer (Cable and Potentiometer)
02-061-069	NOP-33258	Cable Assembly Light (Two wire cable only)

STAGE		
NEW PN	Old PN	Description
02-069-530	NOP-90353	Stage Assembly Long A (Current setup)
02-056-907	NOP-90354	Stage Assembly PTI Blocking
05-055-781	NOP-33334	Bumpers for Stage (need 3)
35-051-665	NOP-22100020	Screws (Need 3) 6-32 by 3/8 - Socket set screw cup point
05-063-942	NOP-33181	Fresnel Lens - 3BX only

ACCESSORIES		
NEW PN	Old PN	Description
05-055-782	NOP-33337	Foot Bellows
02-073-803	NOP-87611-11	Manual 3BX
02-059-319	NOP-33353	Vario Calibration Plate Assembly
02-054-030	NOP-50060	Barcode Scanner
60-053-122	NOP-87503	Weco-Vario Alignment Gauge

CALIBRATION PLATE		
NEW PN	Old PN	Description
02-065-548	NOP-33387	Vario 3-pin
02-059-319	NOP-33353	Vario 1-pin
02-059-318	NOP-33352	AIT
02-059-320	NOP-33354	Essilor
02-059-324	NOP-33370	Coburn
02-059323	NOP-33369	Nidek