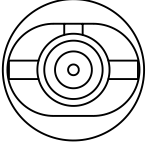



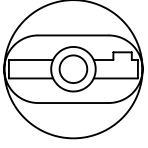

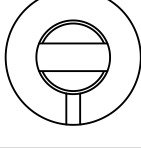

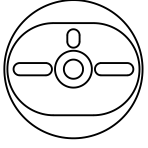

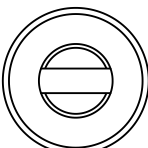

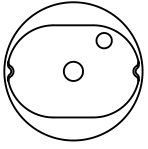

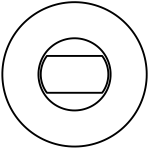

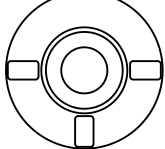

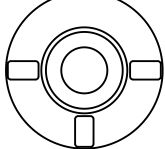

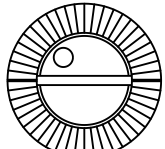

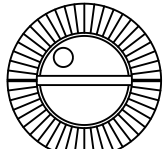

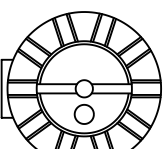

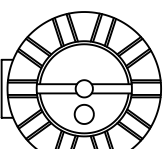

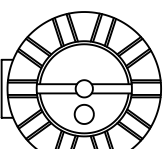





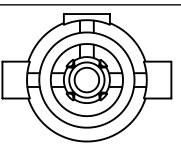

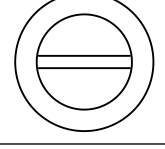

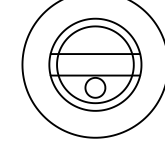



EDGER BLOCKING STYLES

REVISION DATE: 9-15-06	CHUCK/ SMALLEST RIMLESS "B"	PDA	CB		CHUCK/ SMALLEST RIMLESS "B"	PDA	CB				
		SEMI-TECH	87012 18mm	87070	87072			NIDEK	ADAPTER 87027 18mm	42270	42272
		AIT	87022 18mm	87080	87082			INDO	42100 18mm	42270	42272
		COBURN	87032 18mm	87090	87092			ESSILOR SUCTION BLOCK	42250 24mm	42260	42262
		SHURON	87042 PIN- 87062 18mm	87100	87099			BRIOT	87106 ADAPTER- 87105 23mm	87085	87104
		OMI OEM	87065 18mm	87070	87072						
		OMI AFTER MARKET	87064 18mm								
		VARIO 19mm	90381 20.1mm	42204	42211						
		VARIO 17mm	90382 18mm								
		ESSILOR 19mm	90522 20.1mm	87117	87102						
		ESSILOR 17mm	90524 18mm								
		ESSILOR 14mm	87011 15mm								
		GERBER STEP 2	87006 18.7mm	87075	87076						
		GERBER STEP 2 17mm	87007 18mm								
		SILOR POSI-SCOPE	87052 18mm	87116	87107						
		WECO	42200 22.6mm	42204	42211						
		FOMAP	87038 18.9mm	87118	87101						